## C & L FIRE POTS

FOR GASOLINE AND KEROSENE



Fig. H-1575



Fig. H-1576



Fig. H-1577

No. 1. For tinners, galvanized iron and copper workers, plumbers and electricians. It is 12½ inches high, 9¾ inches in diameter at base, 6¾ inches in diameter at top. The tank is made of heavy gauge welded steel—no soldered joints.

No. 5 is the same as No. 1, except smaller.

No. 71. Noiseless, smokeless and odorless. Has sub-flame for generator. Burner

has double heating surfaces. The gas is superheated and produces a very hot flame. No. 72. Exactly the same as the No. 71, only one size smaller.

No. 221. For heavy roofing and cornice work. A strong, durable and economical

fire pot. Quickly heats coppers weighing 16 pounds and under.



Fig. H-1578



Fig. H-1579



Fig. H-1580



No. 21 steel fire pot is extra strong and durable. Tank is heavy gauge with bottom and fittings welded in (not soldered). Extra heavy uprights and top plate and large filler. Fitted with automatic brass pump.

No. 11 is the same as No. 21, but has rubber bulb to produce pressure.

No. 20 galvanized fire pot is made with brass fittings. Tank is galvanized iron. Auto-

matic brass pump produces air pressure.

No. 10 is the same as No. 20, but has rubber bulb to produce pressure.

No. 41 fire pot is made with galvanized iron tank with malleable iron fittings.


No. 31 is the same as No. 40, except with rubber bulb.

Number											
Capacitypints Priceeach	7	5	7	5	8	8	8	8	8	8	8
Priceeach	9.00	6.75	9.00	6.75	10.00	6.00	5.50	5.00	4.50	4.50	4.00

<sup>\*</sup>For kerosene.

## C & L TORCHES

### FOR GASOLINE AND KEROSENE

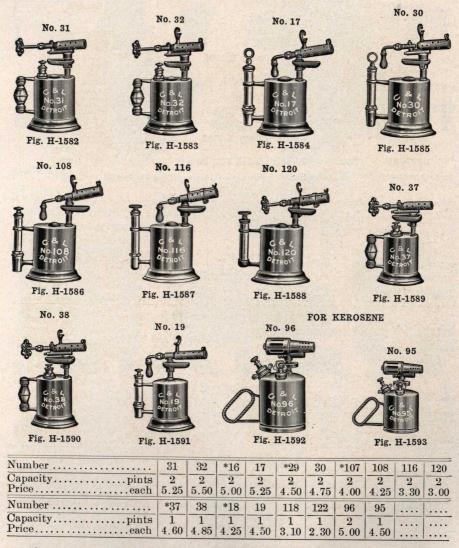

\*Same torch as next highest number, except without hook and support for soldering copper. No. 118 same as No. 116 and No. 122 same as No. 120, except pint size and all four styles have loose soldering copper attachments that fit onto burner tube.

Nos. 96 and 95 are for kerosene; all others are for gasoline.

# FIRE POT AND PUMP REPAIRS

COIL FIRE POT REPAIRS

RESERVOIR AND OF











Group H-1595

AIR VALVE HANDLE FILLER













Group H-1596

UPRIGHT

CONNECTING PIPE WIRE FOR COIL

BURNER



Group H-1597

Description	Each	Description	Each	Description	Each
Reservoir	3.60	Handle Ear	.16	Nuts	.04
Nos. 1 or 2 Shield.	1.00	Filler Plug	.30	Upright	.16
No. 3 Shield	2.00	Coil	.80	Connecting Pipe.	.16
Coil Cup	.60	Ell or Tee, Mall	.12	Wire for Coil	.10
Top Plate	.40	Ell, Brass	.20	Burner	.20
Handle	.50	Tee, "	.30	Bulb	.70
Valve	.90	Plug	.12	Brass Pump for No. 20	1.00
Air Valve	.60				

#### FIRE POT REPAIRS

FILLER PLUG









PUMP AND COLLAR

Group H-1598

Description	Each	Description	Each	Description	Each
Filler Plug  "Burner and Swivel	.50	Swivel	.50	Pump for Fire Pot Collar	1.00

PUMP REPAIRS

PLUNGER ROD



PUMP SLIDE



CUP LEATHER

PUMP BOTTOM SHOWING VALVE

Group H-1599

Description	Each	Description	Each	Description	Each
Cup Leathers	.06	Springs	.02	Plunger Rod Complete	.50
Hexagon Nuts, Any Size Pump Caps	.02	Cork Holder		Pump Complete.	1.00
Plunger Knobs	.10	Spring Plates Plunger Rod	$.10 \\ .20$	" Collar	.20
Cork Washers	.02	Trunger Rod	.20	1 Set Cups and Washers	.10